

INLAND NORTHWEST REGION COVID-19 PCR Ordering and Specimen Collection Supplies

87798K COVID 19 PCR (MultiCare Laboratories)

Sunquest Order: COVIDM Testing Locations: DH, VH

Use for

Most Inpatients and Higher Acuity ED patients



MHS Staff, Uninsured Patients

Ambulatory Pre-Surgical and any Pre-Surgical screening needed <48 hours before surgery

NP Nasopharyngeal

S2 Media or Saline/Blue Label

FloQ swab

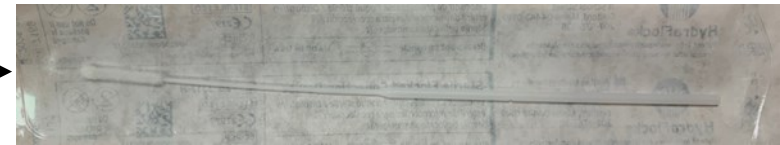

87798I COVID 19 PCR (UW Laboratory)

Sunquest Order: COVID Testing Locations: UW

Use for

Most Ambulatory patients and Lower Acuity ED patients


First Responders

Inpatient Pre-Surgical case screening at least 48 hours prior to surgery

Combination Swabs

2 Polyester Swabs

Nasal and OP (throat)

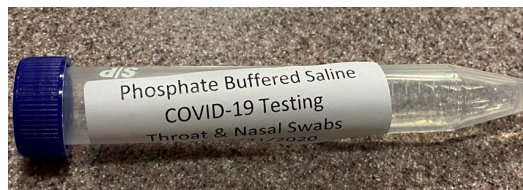


OR



Nasal/Midturbinates

Polyester swab

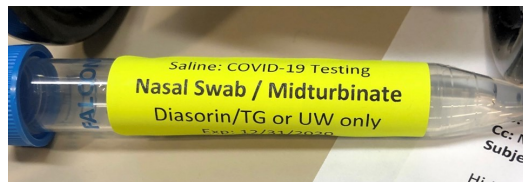

OR

